

## **CARGO SPORTS BAG™ Use Instructions**

### **Attaching the Cargo Sports Bag™:**

1. Before attaching the Cargo Sports Bag™ to the vehicle, make sure there are no twists in top perimeter strap or the net.
2. Loosen the strap at CAM buckle to desired width for easy installation. You may need to reposition the strap end clip to allow additional adjustment.
3. With CAM buckle facing you, connect each fastener to a tie down point on the vehicle.
4. If no tie downs can be found; you can utilize the d-rings provided free with the Cargo Sports Bag™ by following the instructions provided.

### **To use the Cargo Sport Bag™:**

1. Release the CAM buckle to loosen the top perimeter strap, opening the top of the bag.
2. Load items through the top of the bag and distribute as evenly as possible.
3. Once you have finished loading the cargo bag, adjust the top strap as necessary.

**NOTES:** Make sure all connecting points on vehicle are secure. Loads shift & settle; inspect after 10 miles; then every 40/50 miles thereafter (inspect in shorter intervals if on rough bumpy roads or inclement weather). The Cargo Sports Bag™ can remain on the vehicle at all times, or be removed after use. It can also be unhooked (at the fasteners) and removed from the vehicle with contents inside, and taken with you!

**WARNING:** Inspect product before each use. **DO NOT USE:** If product is deformed, worn, damaged, rusted or not securely installed. Avoid contact with sharp objects, flame or chemicals that may damage or weaken product, as these conditions may result in severe **DAMAGE** to persons or property. Product is NOT designed nor to be used as a personal restraint, or towing device. USER assumes full responsible for determining product's safe condition and suitability for a particular purpose. **NOTICE TO PURCHASER:** Core Products USA is not responsible for damage or injury caused by improper use of products.