

LOAD LOCK™ Use Instructions

Standard Glass/Nylon Retainer, Stainless Steel Pin or Aluminum Retainer Load Lock™

Lock LOAD LOCK™ in Trax:

1. Place second and third fingers under the wings of the Load Lock™ and place thumb on the top of the pin.
2. Push down on the pin (like a syringe).
3. Place Load Lock™ in any round opening on the trax.
4. Then slide the Load Lock™ to the narrow point (between two round openings) and release the wings.

NOTES: Be sure the Load Lock™ sits flat against the Trax and is locked in place parallel to the Trax. Loads shift & settle; inspect after 10 miles; then every 40/50 miles thereafter (inspect in shorter intervals if on rough bumpy roads or inclement weather). Make sure all connecting points on vehicle are secure.

Move or Remove Load Lock™:

1. Place second and third fingers under the wings of the Load Lock™ and place thumb on the top of the pin.
2. Pull upward with your fingers on the wings (like a syringe).
3. Slide the Load Lock™ to the round opening on either side and lift the Load Lock™ off of the trax.

WARNING: Inspect product before each use. **DO NOT USE:** If product is deformed, worn, damaged, rusted or not securely installed. Avoid contact with sharp objects, flame or chemicals that may damage or weaken product, as these conditions may result in severe DAMAGE to persons or property. Product is NOT designed nor to be used as a personal restraint, or towing device. USER assumes full responsible for determining product's safe condition and suitability for a particular purpose. **NOTICE TO PURCHASER:** Core Products USA is not responsible for damage or injury caused by improper use of products.